

**apple
personal
computer
systems**



MicroDrive

T U R B O

Owner's Manual

**IDE Hard Disk Drive and Compact Flash
DMA Expansion Card**



MicroDrive

T U R B O

Customer Satisfaction

ReActiveMicro.com will replace the MicroDrive IDE Card at no charge to you the original purchaser during the 90-day period after you purchased the MicroDrive Expansion Card.

Limitation on Warranties and Liability

Even though ReActiveMicro.com has tested the hardware described in this manual and reviewed its contents, neither ReActiveMicro.com nor its affiliates make any warranty or representation, either express or implied, with respect to this manual or to the hardware described in this manual, their quality, performance, merchantability, or fitness for any particular purpose. As a result, this hardware and manual are sold “as is”, and you the purchaser are assuming the entire risk as to their quality and performance. In no event will ReActiveMicro.com or its suppliers be liable for direct, indirect, incidental, or consequential damages resulting from any defect in the hardware or manual, even if they have been advised of the possibility of such damages.

In particular, they shall have no liability for any programs or data stored in or used with ReActiveMicro.com products, including the costs of recovering or reproducing these programs or data. Some states do not allow the exclusion or limitation of implied warranties or liability for incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Copyright

Apple II Personal Computers are trademarks of Apple Inc.
ReActiveMicro.com is not affiliated with Apple Inc.

Product Revisions

ReActiveMicro.com cannot guarantee that you will receive notice of a revision to the hardware described in this manual.



www.reactivemicro.com



<https://m.facebook.com/reactivemicrousa>



Contents

MicroDrive Turbo	1
Technical Specifications	1
Advanced Features	2
Setup Utility.....	4
Make a Backup Copy	4
Installation	5
Apple IIGS	5
Apple II/II+/IIfx.....	7
Compact Flash Card Files	8
CiderPress II.....	8
Using the Setup Utility	8
Setting Up a New CF Card	13
Backup and Restore.....	14
Backing-up the CF Card	14
Restoring the CF Card	15
Raw Disk Copier	15
Copy a File to the CF Card	16
Copy a File from the CF Card.....	17
Technical Support.....	19
Uthernet/ADTPro with MicroDrive Turbo	19
Copy Protected Software	19
Self-Powered IDE to CF Adapters	20
IDE Pin 20 Power Mods.....	20
The HFS File System	21
HFS (MAC) File System	21
Firmware	22
ROM Chip Removal.....	22
Step by Step Instructions	22
Mechanical Hard Disk Drive Setup	23
IDE Drive Anatomy.....	23
Setup	24
Install the IDE connector cable.....	24
Powering the Hard Disk Drives.....	26
Preparing Your Hard Disk Drive.....	26

Starting from Scratch	26
Changing Hard Drive Configuration	28
Modifying Partitions.....	29
Another Look at the MicroDrive Installer	29
New Hard Disk Setup	29
Installing the GS/OS Driver	30
Using Two Hard Disk Drives	31
Hard Drives Jumper Settings.....	31
Booting from a Different Volume	31
AE Vulcan Upgrade	33
Hard Disk Back Up	33
Setting Up the Hard Drive	33
Error Messages at Boot Time	34
Drive 1 Error.....	34
Missing configuration data	34
Error reading boot sector	34
Volume not formatted.....	35
Unable to load ProDOS	35
Problematic Hard Disk Drives	37
WD Caviar Series	37
HD Installation.....	38
IDE Interface Overview.....	39
Introduction	39
The IDE Interface.....	39
IDE Origins	40
The Evolution of IDE (ATA):.....	41
Compact Flash Overview	42
What is a CF Storage Card?	42
CF Card Working Diagram.....	42
Card History	43
First DMA IDE Controller	43
Card Revisions	43
Joe's Computer Museum Review	43

Congratulations

On your purchase of the MicroDrive Turbo Card from ReActiveMicro.

This manual is designed to assist you in every phase of integrating the MicroDrive Turbo Card into your Apple II Personal Computer System.

The manual covers everything from the hardware installation, software configuration, and much more. The hardware is the most sensitive part; an improperly-performed hardware installation could damage the MicroDrive Turbo and/or the Apple Computer.

The MicroDrive Turbo is an expansion card that gives the Apple II Personal Computer the ability to use IDE type hard disk drives or Solid-State Compact flash cards, which are both easy to handle and have a long-life span.

Everything is included to get you up and running right out of the box.

There are two categories of Apple II owners: those who have installed peripheral cards into their computers, and those who haven't.

Those of you who have ventured under the hood of their computer probably need little explanation of the process. You will see that the MicroDrive Turbo's installation is not much more difficult than any other card in your system.

Those of you who have never explored the insides of your computer the installation is not difficult if you follow the detailed steps in the Installation section. Nevertheless, you may decide that this process is not for you; in this case, arrange for a qualified computer technician to install the MicroDrive Turbo Card for you.

No matter what your level of experience, do not attempt to install MicroDrive Turbo Card until you have read the manual and understand all of the steps completely.

Static Precaution

Avoid any and all electrostatic discharges to the MicroDrive Turbo Expansion Board. Like all electronics devices, a static discharge can destroy or shorten the life span of the delicate components on the expansion card.

This risk is highest in areas where there is carpet, and especially during dry weather.

You can momentarily discharge any buildup by coming into contact with a grounded piece of metal, the most convenient method is touching the metal case of the Apple II's internal power supply, the computer must be plugged in for this procedure to work, the power cable has the grounded connection.


MicroDrive Turbo

Technical Specifications

- Requires an Apple II Expansion slot.
- Fully ProDOS and GS/OS compatible.
- Compatible with all known Apple II hardware.
- DMA Capable.
- Compatible with memory up to 8 MB on the Apple IIGS.
- GS/OS driver with GS/OS caching support included.
- Can boot a minimum GS/OS System in 12 seconds.
With an Accelerator installed 9 seconds.
- Allows to boot any partition.
- Up to 8 partitions on one CF Card, 16 partitions on two CF Cards.

Fully compatible with all hardware such as:

TransWarp GS, ZIP GSX, PC Transporter, RAM Cards from Apple, Applied Engineering, CV-Tech, Harris, Q-Labs, Sequential Systems etc.

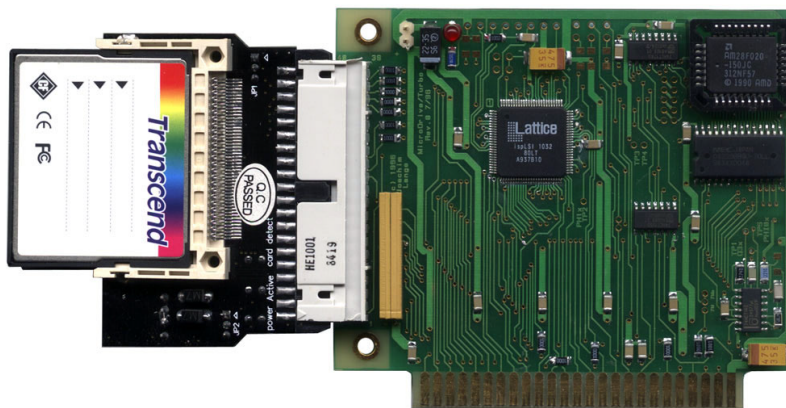

MicroDrive Turbo Expansion Card

Advanced Features

The MicroDrive Turbo uses CompactFlash Cards. Solid State, readily available, inexpensive, low power, noise free, high degree of durability with a very long lifespan, superb quality.

For more information on CF Cards see [Compact Flash Overview](#) at the end of this manual.

CF Storage - Benefits

Moving software downloaded from the Internet to your Apple II Personal Computer has never been quicker or easier. Just remove the CF Card from your MicroDrive Turbo, insert it in to your CF Card Reader, start [CiderPress](#). You can read and write directly to the CF Card. Using your PC for transferring files and backing everything up, taking care of your Apple II files has never been so quick and painless!

Standard IDE Interface

The 40 Pin IDE interface on the MicroDrive Turbo Card is a standard 16-bit IDE port. It is capable of addressing Primary and Secondary (Master/Slave) IDE storage.

IDE to Dual CF Adapter

The MicroDrive Turbo Card comes standard with a 40 Pin IDE to Dual CF Adapter. Users can control which of the two CF Slots is Primary and Secondary using a Jumper on the Adapter.

The Dual mode feature is only available on Apple IIGS Personal Computer.

DMA

As the name implies, the MicroDrive Turbo Card performs Direct Memory Access which bypasses the CPU and allows for an incredible 40% faster read and write speeds when compared to conventional controllers.

With an accelerator installed in your IIGS you can boot GS/OS in as fast as 7 seconds! The DMA option can be turned on or off using the Setup Utility.

ProDOS 8 and 16

The MicroDrive Turbo Card is ProDOS compatible. It's recognized as a **Standard Mass Storage Device** just like any Hard Disk Drive on your Apple II. Large Volume DOS 3.3 support is provided through the use of a program called **DOS.MASTER** (preloaded on CF Card).

Boot Options

By default, Volume 1 is set to boot. However, when setting up a New CF Card the user sets which Volume they desire to boot. Or on an existing CF Card the Setup utility can modify the default boot Volume. The MicroDrive Turbo Card also offers a temporary option to boot to ANY volume.

When powering on the Apple II the user will press and hold the  key. This will pause the MicroDrive Turbo's splash screen.

The user then presses the corresponding Volume's number key, and the MicroDrive Turbo Card will boot to that Volume.

Apple IIGS and Apple II/II+/Ile Operation

The MicroDrive Turbo Card comes standard with the Apple IIGS Firmware. You can however order a version of the firmware for use with an Apple II/II+/Ile computer, the firmware maybe labelled as Ile, however it has been updated to work in the II/II+/Ile.

Setup Utility

Make a Backup Copy

Before using your MicroDrive Turbo Card, make a backup of the MicroDrive Turbo Setup Utility. Without this Utility you will be unable to re-setup the CF Card(s) should you run into problems or accidentally format the original copy.

It is advised to make copies of the Setup Utility (Backup floppy).

Step by Step Instructions:

- 1 Upon booting the MicroDrive Turbo Card you will be taken to Volume 1 which holds the ProDOS 8 utilities. You will see menu item named **COPYIIPLUS9.1**
- 2 Using the **Arrow** keys highlight the item and press `return`.
- 3 Press the letter `C` to select **COPY**, and the letter `F` for **FILES**.
- 4 Use the **Arrow keys** to select the Slot where you installed the MicroDrive Turbo, and Drive 1. Press `return`.
- 5 Use the **Arrow** keys to select the Slot and Drive where your backup floppy is located. Press `return`. You will see a folder named **MICRODRIVE**.
- 6 Using the **Arrow** keys highlight the folder and press `return`. You will see a file called **MICRODRV.SETUP**
- 7 Using the **Arrow** keys highlight the file and press `return`.
- 8 Press the letter `G` to start the Copy Process. This assumes your Floppy Disk is preformatted with ProDOS. If not, then you can use Copy II Plus to also format the Disk.

Installation

Apple IIGS

When installing the MicroDrive Turbo Card in your Apple IIGS a few things need to first be taken into consideration.

For example, will you want to primary boot the MicroDrive Turbo Card, your Floppy Drives, or other bootable devices installed in your system?

For most installations users will want to boot primarily to the MicroDrive Turbo Card. In this case we recommend installing the MicroDrive Turbo Card in Slot 7.


And when you want to boot to the Floppy Drives hold down the `esc` key on boot. This allows the IIGS to **BYPASS** booting the MicroDrive Turbo Card and move on to checking the other bootable devices such as a floppy disk drive.

For other configurations, the good news is that the Apple IIGS allows a lot of flexibility when it comes to booting. You will need to decide however what is the best to meet your needs.

If not installing the MicroDrive Turbo Card in Slot 7, then we usually recommend Slot 2.

By default, the IIGS is set to use Slot 2

for a dial up Modem. Since most users no longer use a Modem, Slot 2 is an ideal choice. The default setting in the Apple IIGS will need to be changed in order for the MicroDrive Turbo Card to work in Slot 2.

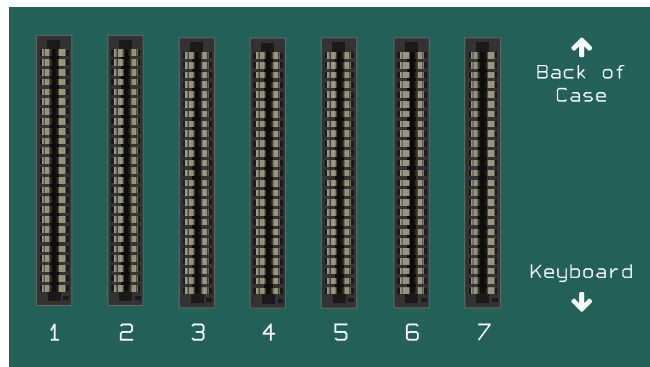

MicroDrive Turbo Expansion Card

To edit the settings or change the way your Apple IIGS boots you will need to enter the Control Panel.

There are a couple of ways to do this:

-
- 1 Hold down the **Option** key on the keyboard and power on the IIGS. Select **1** for the Control Panel. Press `return` to select Control Panel. Once in the Control Panel use the **Arrow** keys to select the Slots Menu and press `return`.
 - 2 Power on the IIGS and at any time hold down the `⌘` Key and `control` keys, then press the `esc` key. Press `return` to select Control Panel. Once in the Control Panel use the **Arrow** keys to select the Slots Menu and press `return`.
-

Most Apple IIGS Computers will be set to the default configuration, denoted by the **Check Mark** on the left of the option. Use the `↑` `↓` keys to select an option, then `←` `→` keys to set the option.

Be sure to press `return` when done to save any changes.

There is nothing needed to use the MicroDrive Turbo Card in Slot 7. It is already defaulted to **Your Card**. There is also no need to change the **Startup** Option if it is set to **Slot 7** or **Scan**.

If, however you want to use the MicroDrive Turbo Card in **Slot 2** you will need to change the Slot setting to **Your Card**.

And if you would like the Apple IIGS to boot the MicroDrive Turbo Card in Slot 2 then you will also need to change the **Startup** Option to **Slot 2**.


Be sure to press `return` when done to save any changes.

-
- 1 The **Startup** Option in the Control Panel allows you to control how the Apple IIGS looks for bootable devices when powered on. **Scan** will tell the computer to look from Slot 7 to Slot 1.
 - 2 Selecting **Slot X**, (**X** refers to the Slot number) will tell the computer to **ONLY** boot that, Slot. If no bootable devices are found, then the Apple IIGS will report **Check startup device!**
 - 3 You can however tell the IIGS to boot from another Slot by breaking into BASIC (hold down the `control` key and press the `⏪` **Reset** key), then type **PR#X** and press the `return` key, (**X** refers to the Slot number).
 - 4 The MicroDrive Turbo Card allows the IIGS to skip trying to boot it by holding down the `esc` key on boot.
-


Apple II/II+/IIfx

As with the Apple IIGS, you will need to decide which storage device will be the primary boot device? the MicroDrive Turbo Card, the Floppy Drives, or other bootable devices installed in your system?

For most installations users will want to boot primary to the MicroDrive Turbo. In this case we recommend installing the MicroDrive Turbo in Slot 7.




When you want to boot to an external floppy drive(s) simply hold down the  key during the boot-up sequence. This allows the Apple II to **Skip** booting the MicroDrive Turbo Card and move on to checking the floppy drive(s) or possible other bootable devices in lower numbered Slots.

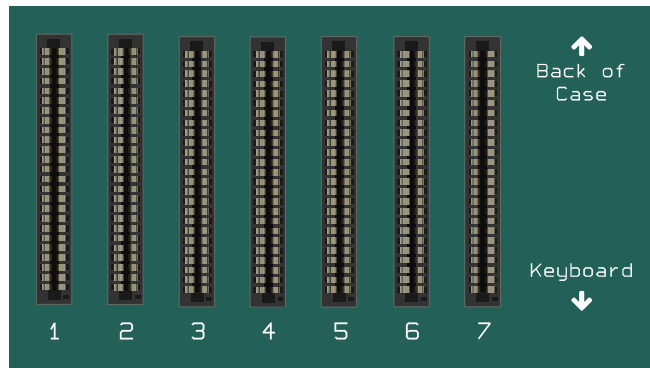If, however you install the MicroDrive Turbo Card in another Slot then it may not boot and depends on what other bootable devices are installed in your Apple II Computer.



MicroDrive Turbo Expansion Card

You can however tell the Apple II to boot to another Slot by breaking into BASIC if needed.

- 1 Hold the  key and press the  key.
- 2 Then type **PR#X** and press the  key, (**X** is the Slot number).

Compact Flash Card Files

One important feature of the MicroDrive Turbo Card is the ability to use the Compact Flash Cards (CF) with **CiderPress II** to back up the Volumes on it.

To do this you will need the following:

- CiderPress II installed on your PC or Mac Computer.
- USB Card Reader that supports CF Cards.



32Meg Volume Images or whole CF Card images can be downloaded from the following ReActiveMicro link: [ReActiveMicro 32 Meg Hard Drive Image](#)

CiderPress II



For the latest version of **CiderPress II** visit the following web sites.
A CF Card Reader is also required to access the CF Card.

Windows PC a2ciderpress.com

Apple macOS retrocomputingaustralia.com

Windows 10/11 may require CiderPress II to be run in Administrator Mode in order to operate correctly, this all depends on your computer's configuration.

Using the Setup Utility

Installation:

The MicroDrive Turbo is shipped Pre-Setup. Just install in any Slot. It is recommended that Slot 7 be used if possible since you will most likely want to boot from the MicroDrive Turbo more often than your Floppy Drive(s).

And when you want to boot to a Floppy Drive(s):

- 1 During the boot-up procedure, press and hold `esc`.
This will bypass the MicroDrive Turbo Card in favor of the Floppy Drive(s).
- 2 Apple IIGS users may need to make a change to Slot settings in the Control Panel. To access the Control Panel first boot the IIGS, then press and hold down the `control` key, and then press the `esc`.

Setup Utility: Be sure to back-up the MicroDrive Turbo Setup utility to floppy!
This disk will be for backup purposes or if you need to setup a new CF Card.

-
- 1 Upon booting the MicroDrive Turbo Card you will be taken to Volume which holds the ProDOS 8 utilities. You will see a folder named **SHRINK.IT**
 - 2 Using the **Arrow** keys to highlight the folder and press `return`. You will now see a file called **SHRINK.IT.V3.4**
 - 3 Press `return` to Execute it.
 - 4 Press the letter `O` to open an archive. **MICRODRV.IIE.S1** is for a 5¼" disk.
MICRODRV.TURBO is for a 3½" disk.
 - 5 Select One and press `return` twice.
 - 6 Next Select the Drive on which to write. When done be sure to boot the disk and run the Setup utility to make sure it restored correctly. Repeat the above process if needed.
-
- Done!
-

If you require a Setup utility diskette to be mailed to you, there will be a charge.
Email: ReActiveMicro for more information.

Check The DMA Setting: It is advised to check the DMA setting in the Setup utility to make sure it is set correctly. Usually there isn't any issue, however you can experience data corruption or loss if the setting is not correct.

- 1 Upon booting the MicroDrive Turbo Card you will be taken to Volume 1 which holds the ProDOS 8 utilities. You will see a folder named **MICRODRIVE**.
 - 2 Using the **Arrow** keys highlight the folder and press `return`.
 - 3 You will now see a file called **MICRODRV.SETUP**. Press `return` to execute it.
 - 4 Press the letter `D` to select **DMA Mode**. If it's set currently to your Apple II, then you are finished. If not, then continue to the next step.
 - 5 Press `return` to change the setting. For Apple II users select **Enable**.
 - 6 Press the letter `W` to Select **Write Configuration**.
 - 7 Press `return`, then the letter `W` to Save the New Configuration.
- Done!

Set DMA Mode to "Disable" to experience the performance loss of your Apple II System if you were using a Non-DMA Mass Storage Device. DMA Performance is the key feature that you get with the MicroDrive Turbo expansion card.









The Pre-setup and Pre-loaded CF Card: The MicroDrive Turbo Card comes with a Pre-Setup CF Card which has 4 ProDOS Volumes on it. The CF Card comes pre-loaded the same for the Apple IIGS or II/II+/IIe.

- Volume 1 has ProDOS 8 Utilities loaded on it and is bootable into ProDOS 8.
- Volume 2 has GS/OS v6.0.1 loaded on it and is bootable. You will need at least 1Meg of RAM in order to RUN GS/OS or you will be forced to exit.
- Volume 3 has DOS.MASTER loaded on it and is bootable into ProDOS 8 which loads BASIC. You will see a folder called DOS.MASTER.
- Volume 4 is formatted in ProDOS and is not bootable.

You can setup more volumes on the CF Card if you wish, however you will quickly run out of Slots under ProDOS 8.

ProDOS maps each Volume to a Slot and Drive, the same as what is done with the Floppy Drives so the current 4 Volumes take up 2 Slots, which have 2 Drives each. If you don't have many peripheral cards in your Apple II then adding more Volumes may not pose a problem. However, users which have other devices in Slots which get a Volume mapped to them may not be able to use the card or the Volume.

Boot to Other Volumes: The MicroDrive Turbo Card comes set to boot to Volume 1 by default. You can however temporarily boot to other Volumes on the CF Card.

- 1 Hold down the  key when powering on the Apple II. This will pause the MicroDrive Turbo's splash screen.
 - 2 Lastly press the corresponding Volume's number key. The MicroDrive Turbo will boot to that Volume. You can also use the Setup utility to make booting to another Volume the current setting.
 - 3 Upon booting the **MicroDrive Turbo** you will be taken to Volume 1 which holds the ProDOS 8 utilities. You will see folder named MICRODRIVE.
 - 4 Using the **Arrow** keys highlight the folder and press . You will now see a file called **MICRODRV.SETUP**.
 - 5 Press  to execute it.
 - 6 Press the letter  to select Default Boot Volume.
 - 7 Press  to change the setting to the desired NEW boot Volume.
 - 8 Press the letter  to select **Write Configuration**.
 - 9 Press , then the letter  to Save the New Configuration.
- Done!

Adding Volumes to CF Card: To add more Volumes to your CF Card.

- 1 Upon booting the MicroDrive Turbo you will be taken to Volume 1 which holds the ProDOS 8 utilities. You will see a folder named **MICRODRIVE**.
 - 2 Using the **Arrow** keys to highlight the folder and press **return**. You will now see a file called **MICRODRV.SETUP**
 - 3 Press **return** to execute it.
 - 4 Press the letter **E** to select Partition Editor. You will immediately be taken to the Partition Table area on the right side of the screen.
 - 5 Press the letter **A** to add a New Volume. Press the **?** key for available commands.
 - 6 Press and hold both **Apple** keys, then press the **→** key. The Blk Size and Dec/Hex column values will start to change.
 - 7 Keep pressing the **→** Right Arrow key till the Blk Size reads **\$010000**. Release the **Apple** keys.
 - 8 Press the **←** key once. The Blk Size should now read **\$00FFFF**. ProDOS can only use UP TO 32Megs of space. \$00FFFF is 32Meg in Blocks. You cannot use volumes larger than 32Megs.
 - 9 Press the letter **D** to delete any volumes or to Start Over.
 - 10 Press the letter **Q** twice if you DO NOT want to save your changes and exit. Repeat the above steps if you want to add more Volumes.
 - 11 Press the letter **W** to select Write Configuration.
 - 12 Press **return**, then the letter **W** to save the New Configuration.
- Done!

Don't forget you will need to Format any New Volumes before those volumes can be used to store files.

Deleting Volumes from CF Card: To remove Volumes from your CF Card.

-
- 1 Upon booting the MicroDrive Turbo you will be taken to Volume 1 which holds the ProDOS 8 utilities. You will see a folder named **MICRODRIVE**. Using the **Arrow** keys highlight the folder and press `return`. You will now see a file called **MICRODRV.SETUP**
 - 2 Press `return` to execute it.
 - 3 Press the letter `E` to select Partition Editor. You will immediately be taken to the Partition Table area on the right side of the screen.
 - 4 Use the **Arrow** keys to select the Volume you want to delete.
 - 5 Press the letter `D` to delete the Volume.
 - 6 Press the letter `Q` twice if you DO NOT want to save your Changes and exit. Repeat the above steps if you want to add more Volumes.
 - 7 Press the letter `W` to select Write Configuration.
 - 8 Press `return`, then the letter `W` to save the new configuration.
- Done!
-

Setting Up a New CF Card

To use a new CF Card (or one that has been accidentally formatted on your PC) you must first partition it.

However, if you do not have an existing bootable CF Card or a backup of the MicroDrive Turbo Setup Utility on Floppy Disk then you will need to contact [ReActiveMicro support](#) in order to obtain a new CF Card which is preloaded, or a Diskette with the Setup Utility.

If you have the Setup Utility, then see Adding Volumes to CF Card: see above.

Backup and Restore

Backing-up the CF Card

To Back-up a Volume:

- 1 Insert the CF Card into your Reader.
 - 2 Allow a few seconds for it to be recognized by your OS.
 - 3 **DO NOT** format the Card if prompted!
 - 4 Launch **CiderPress**.
 - 5 Click on the **Tools** menu and select **Volume Copier** (open volume).
 - 6 Select **Physical Disk X**. (**X** is the disk number).
Click the **OK** button to continue.
Users with a Computer that has more than one Hard Drive or CF Reader will have to determine exactly which Drive the CF Card Reader to be used is. In most cases it will be **1**. The size of the CF Card should also be displayed in the **Remarks** column. All Volumes will now be listed.
 - 7
 - 8 Select the volume you wish to backup and click the **Copy to file button**. You will now be asked where to save the backup file.
 - 9 Select a location and a name then press the **Save button**.
CiderPress will now start to read the Volume and save it to your PC.
 - 10 When it is done the popup progress window will close.
Optional: You can now select other Volumes to backup if desired.
- Done!
-

Restoring the CF Card

To Restore a Volume:

- 1 Insert the CF Card into your Reader. Allow a few seconds for it be recognized by your OS. **DO NOT** format the Card if prompted!
 - 2 Launch **CiderPress**.
 - 3 Click on the **Tools Menu** and select **Volume Copier** (open volume).
 - 4 Select **Physical Disk X**. (X is the disk number). Users with a Computer that has more than one Hard Drive or CF Reader will have to determine exactly which Drive the CF Card Reader to be used is. In most cases it will be **1**. The size of the CF Card should also be displayed in the **Remarks** column.
Uncheck the **Open as read-only** Option above the **OK** button. **WARNING:** Data on your
 - 5 Volumes can now be over-written. Be careful, and make sure to select the correct Volume!
 - 6 Click the **OK** button to continue. All Volumes will now be listed.
 - 7 Select the volume you wish to restore an Image to and click the **Load from file** button.
 - 8 Select the image file and click the **Open** button.
CiderPress will prompt you to make sure you want to overwrite a Volume if there is
 - 9 data there, and you need to confirm **OK** to continue. If it is blank, it will start loading the image. You can load multiple images if you wish.
- Done!

Raw Disk Copier

You can use a utility to Back-up the whole CF Card using a program called HDD Raw Copy, download link: [HDD Raw Copy Tool](#)

CiderPress however has the advantage of being able to open and utilize the backup Images it creates. So, in the future you could copy files from the Images or access data if needed. **You would not need to fully restore the Image as with other backup programs.**

Some Emulators can also access and use the Image files too. Raw Disk Copiers like HDD Raw Copy can however be useful if you would like to quickly duplicate a CF Card as it will copy the Partition information unlike **CiderPress**. So, you do not need to run the MicroDrive Turbo Setup Utility before restoring the HDD Raw Copy Image. This could be a useful backup method should the Setup Utility backup disk you made see **Backing Up - Setup Utility** above ever becomes damaged, lost, or unusable.

Copy a File to the CF Card

- 1 Insert the CF Card into your Reader. Allow a few seconds for it be recognized by your OS. **DO NOT** format the Card if prompted!

- 2 Launch **CiderPress**.

- 3 Click on the **File** menu and select **Open Volume...**

- 4 Select **Physical Disk X**. (**X** is the disk number).

- 5 Click the **OK** button to continue. Users with a Computer that has more than one Hard Drive or CF Reader will have to determine exactly which Drive the CF Card Reader to be used is. In most cases it will be **1**. The size of the CF Card should also be displayed in the **Remarks** column.

- 6 Uncheck **Open as read only** and click the **OK** button. All Volumes and folders will now be listed. Locate the volume, and folder if desired, in which you wish to place the copied file. Roots of Volumes can be identified by the double name such as **MDVOL1::MDVOL1** for example. Folder and files can be identified by the name AFTER the : and the info listed in the **TYPE** column.

- 7 Right click on the location, then select **Add Files...**

- 8 Browse to the file's location, select any desired options, then click the **OK** button. You will now see the file located on the CF Card.

- 9 Repeat as desired to add more files.

Done!

Copy a File from the CF Card

- 1 Insert the CF Card in to your Reader. Allow a few seconds for it be recognized by your OS. **DO NOT** format the Card if prompted!
- 2 Launch **CiderPress**.
- 3 Click on the **File** Menu and Select **Open Volume...**
- 4 Select **Physical Disk X**. (**X** is the disk number).

Click the **OK** button to continue.

Users with a Computer that has more than one Hard Drive or CF Reader will have to determine exactly which Drive the CF Card Reader to be used is.

- 5 In most cases it will be **1**. The size of the CF Card should also be displayed in the **Remarks** column. All Volumes and folders will now be listed. Locate the volume, and folder if needed, in which the file wish to copy is located. Roots of Volumes can be identified by the double name such as **MDVOL1::MDVOL1** for example. Folder and files can be identified by the name AFTER the : and the info listed in the **TYPE** Column.
 - 6 **Right click** on the location, then select **Extract...**
 - 7 **Browse** to the location you wish to copy the file to, select any desired options, then click the **OK** button. You will now see the file located where you selected.
 - 8 Repeat as desired to copy more files.
- Done!



MicroDrive

T U R B O

Technical Support

Uthernet/ADTPro with MicroDrive Turbo

An incompatibility exists in ADTPro versions 2.0.2 and earlier where ADTPro's Uthernet initialization interferes with the operation of the MicroDrive Turbo Card running IIGS firmware.

To be specific, if the MicroDrive Turbo Card is in a slot number lower than the Uthernet or Uthernet II, ADTPro will not start. Even if you create and save an ADTPro Uthernet configuration to specify an Uthernet slot using a different computer, the software and or hardware will not operate correctly.

There are a number of solutions available:

- 1 Use a version greater than 2.0.2 of ADTPro.
Move your MicroDrive Turbo Card to a slot higher than your Uthernet or Uthernet II expansion card. Typical slots are as follow.
 - 3 for Uthernet/Uthernet II Card.
 - 7 for MicroDrive Turbo Card.
- 2 Use the II/II+/IIe version of firmware in your MicroDrive Turbo.

Copy Protected Software

Always think of the MicroDrive Turbo as an internal hard drive, not a floppy disk emulator.

Some programs most notably copy protected games and programs that will not run from the Finder or require their own boot process are not aware of the Apple IIGS Memory Manager and therefore will not run from a hard disk because the MicroDrive Turbo Card requests memory from the Memory Manager. When the memory is overwritten by these types of programs, the MicroDrive Turbo Card software will not function.

Example software:

The Immortal, PHOTONIX). This software does not adhere to the standards published by Apple Computer Inc.

If you can find a program that doesn't work with the MicroDrive Turbo Card and it proves to be OK with Apple's guidelines, you will receive a free update on any software or firmware part of the MicroDrive Turbo Card that requires updating.

Self-Powered IDE to CF Adapters


The MicroDrive Turbo comes with a self-powered IDE to CF Adapter with a pre-setup CF Card. Self-powered refers to the IDE to CF Adapter which uses power supplied on Pin 20 of the IDE connector and does not require an external power source. This means the Apple II Computer can supply power to the CF Card and no other power source is needed.

Boards sold from 2006 to Mid-2008 will have +5v connected to Pin 20 of the IDE Connector in the form of a small jumper wire on the rear of the board. Later boards have a small trace added to the face, left side of the board.

Over the years some users insisted on trying to install the CF Adapter backwards which would cause a short and burn the added trace from the board. All boards from late 2017 and on have a fuse added to the small trace for added protection.

The photo below on the right with the fuse displays what the added trace looks like and its location.

IDE Pin 20 Power Mods

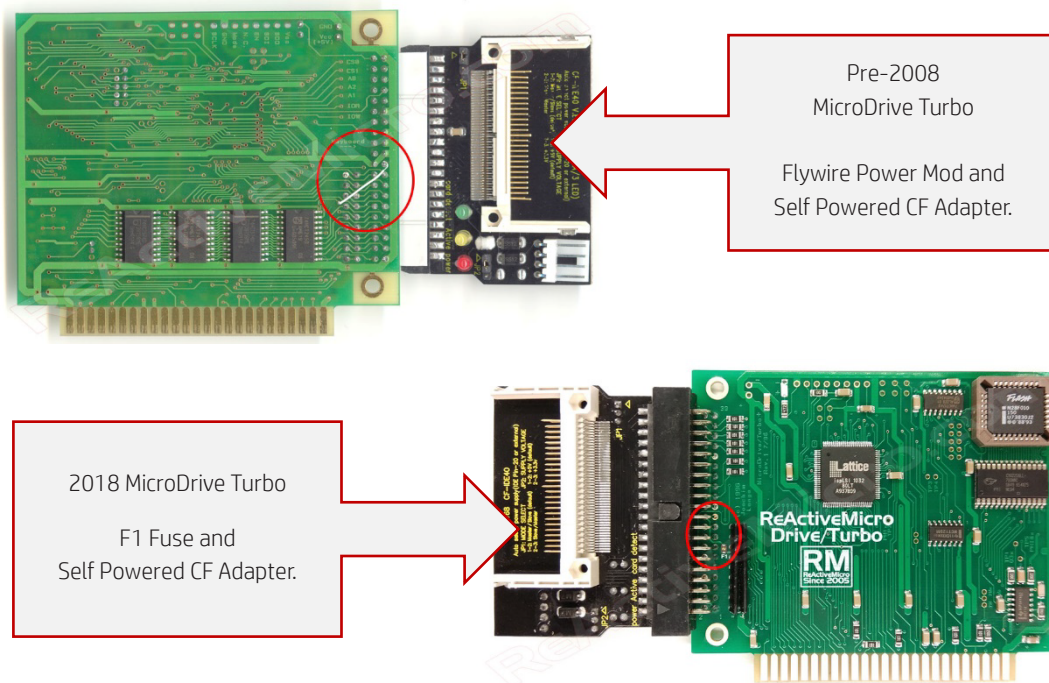

The HFS File System

HFS (MAC) File System



The MicroDrive Turbo Card does not allow partitions greater than 32MB, this is the upper limit for the ProDOS File System. The only reason to open the 32MB limit would be using HFS partitions.

There are several important reasons which should prevent you from using the HFS File System for regular hard disk usage:

- The HFS partitions does not give you any other advantages other than a larger partition size.
- GS/OS cannot boot from a HFS partition.
- If the HFS partition becomes corrupted, there are no ways to repair the directory structure. The partition will have to be reformatted, with a complete loss of data.
- Writing to a HFS partition is very slow, and such, any speed advantage has gone with using a hard disk (writing to a HFS volume is also slow when using diskettes and other storage media).
- Using a HFS partition at read operations is not faster than using a partition with the ProDOS File System.

It is recommended that you do not use the HFS feature as it has no real advantages for the Apple II Personal Computer System.

Firmware

The MicroDrive Turbo comes Pre-Setup for the Apple IIGS or the Apple II Personal Computer.

This can be determined by the Firmware ROM which is installed on the card. The ROM is the small square IC on the upper right of the card. It is the only IC that is removable (Socketed).

The Iie Firmware works on both the Apple II/Ile/Ile and the Apple IIGS; however, it is quite slow in the IIGS compared to the IIGS Firmware.

The Apple II/II+/Ile will lock up if the IIGS Firmware is used on the MicroDrive Turbo.


ROM Chip Removal

The II/Ile Firmware ROM is marked with a label that displays **Iie**. If the label has been removed or fallen off. Try the MicroDrive Turbo Card in a II/IIplus/Ile computer and if it operates correctly then the **Iie** Firmware is installed.

Step by Step Instructions

To remove the Firmware ROM, you will need a **PLCC Extraction Tool**.

- Do not pry too hard on the ROM Socket if possible. Reference the picture for the areas on which to pry up.
- The new firmware ROM should be installed in the same orientation with the chip markings facing up.
- Installing the ROM backwards WILL DAMAGE IT!
- Reference the picture and you will notice one corner of the Socket and ROM are CUT. The other corners are square. There is usually a DOT or mark on the case of the IC to help denote which side is which. In the case of the MicroDrive Turbo Card we want to make sure the Cut Corner and the DOT are facing to the LEFT.
- The chip markings should be facing up, legible, with the gold Edge Connector (aka - Slot Edge) on the bottom of the MicroDrive Turbo Card.

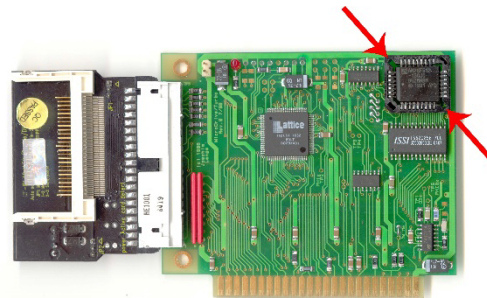

ROM Location and Pry Removal


Mechanical Hard Disk Drive Setup

The MicroDrive Turbo Card is fully IDE Compatible, with this in mind you can connect older style Mechanical IDE Hard Disk Drives to the card. Keep in mind that these older drives require external power, casing, cable exiting the Apple II and due to their age even when "NOS" new old stock, are prone to unexpected failure, in the end they offer no benefit in comparison to Solid State CF Cards.


If you are unfamiliar with the configuration of a Mechanic IDE Hard Disk Drive Setup, this section of the Manual can be overlooked.


IDE Drive Anatomy


IDE 40-Pin Interface Connector

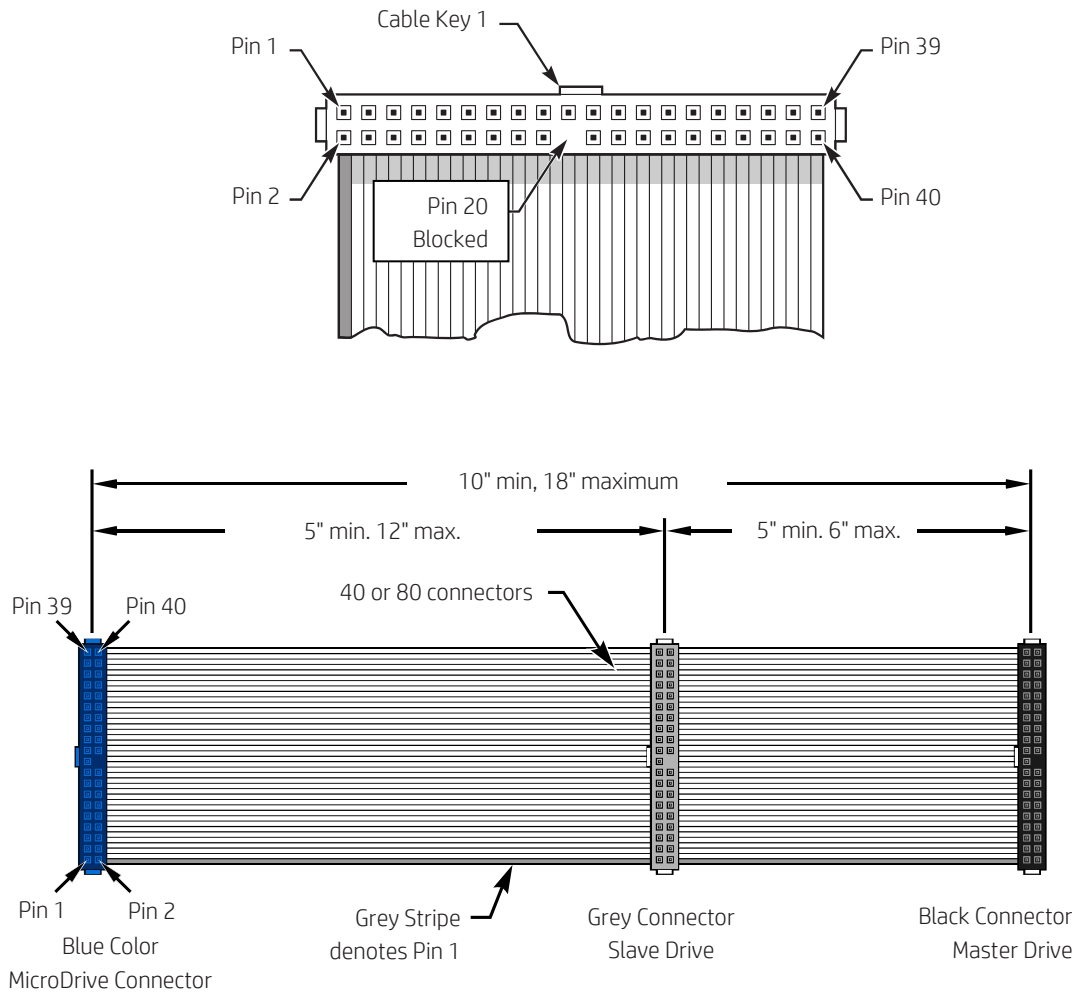


IDE Cable Color Code

 The Blue Connector attaches to the MicroDrive Turbo Card, be sure not to bend any of the pins, it should slide on without force.

 The Grey Connector attaches to an optional Secondary Hard Disk Drive which is referred to as a Slave drive.

 The Black Connector attaches to the Primary Hard Disk Drive which is referred to as the Master Hard Disk Drive.

Typical IDE Hard Drive Connectors

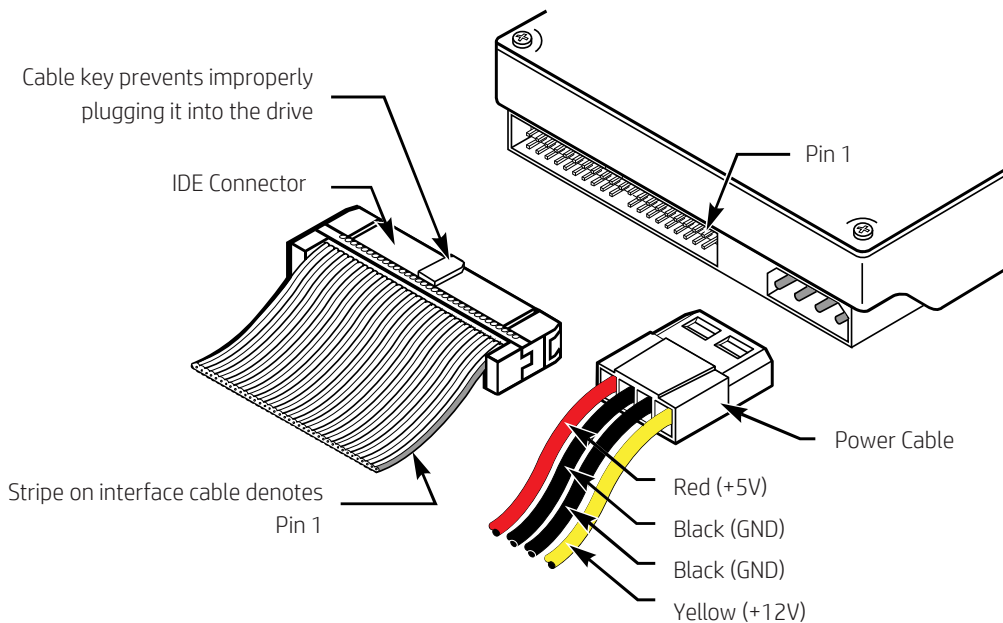

Setup


First, remove the IDE to CF Adapter from the MicroDrive Turbo Card. The unit should just slide off when pulled. Be careful to not bend any pins on the IDE male header.

Install the IDE connector cable


The IDE interface connector is a 40-pin header-type connector and generally is keyed to prevent the possibility of installing it upside down (see images on the next page).

To create a keyed connector, the manufacturer generally removes pin 20 from the male connector and blocks pin 20 on the female cable connector, which prevents the user from installing the cable backward.


The cable also incorporates a protrusion on the top of the female cable connector, which fits into a notch in the shroud surrounding the mating male connector on the device.

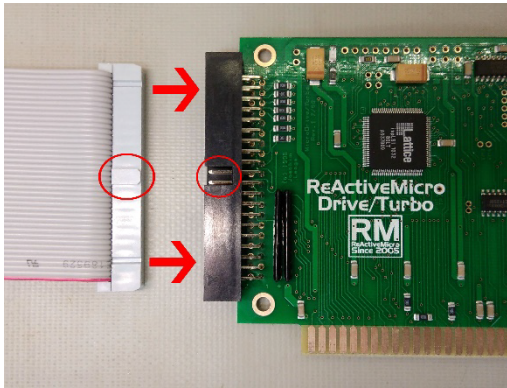

Insertion of IDE Cable

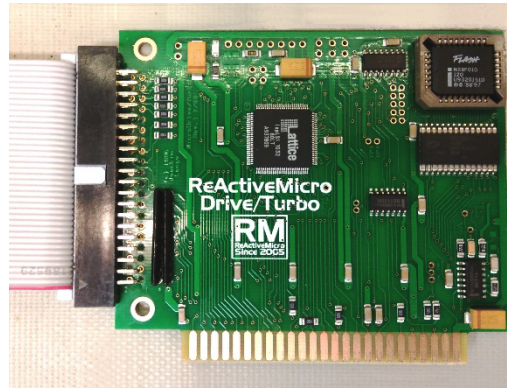

IDE Connected Properly

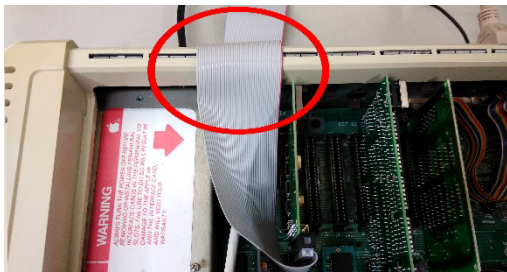

Safe Exit of the IDE Cable



IDE Cable with Top Lid Closed

The IDE Cable does not supply power to the Hard Disk Drives.

The External Hard Disk Drive(s) must be powered from a Secondary Power Source, either by power adapter or case with its own power source.

Recently revised MicroDrive Turbo boards' have +5v connected to Pin 20 of the IDE Connector, see the technical support section of this manual for more information. Be sure to use a cable as shown on the previous page.

You need to adhere to the following in order for all to work correctly:

- The Apple IIGS has to be turned on first.
- The Power Supply to the Hard Disk Drive(s) is then turned on second.
Wrong order and the drive may not spin up.
- The Two Power Supplies must have a common ground, without this the MicroDrive Turbo may not see the Hard Disk Drive(s).

Powering the Hard Disk Drives

External hard drives attached to the MicroDrive Turbo Card must be supplied by an external power supply. The MicroDrive Turbo Card was intentionally designed to not supplying power for the disk drives. Due to excessive current flow, the data integrity and proper functioning of the MicroDrive Turbo Card would suffer if power were drawn via the slot connector. This is a matter of precaution.

When using an external power supply, be sure to use the same wall outlet as your Apple II Computer (to avoid any potential ground looping problems).

Configuring a Hard Disk Drive requires proper documentation. Specifications for most Hard Disk Drives can be found with proper research via the Internet.

Preparing Your Hard Disk Drive

Starting from Scratch

Make a copy of the MicroDrive Turbo Card Utilities Disk. Use this copy now (we will call it the Installation Disk).

Copy the GS/OS driver from the installation disk to your GS/OS boot volume hard disk. Use any copy program to copy the driver to the /your.disk/SYSTEM/DRIVERS folder (**your.disk** is the name of your GS/OS boot disk, for example /INSTALL if the System 6 installer disk will be used). The driver is not required now, but later it will speed up the installation process of GS/OS on the IDE drive (everything works fine even without a GS/OS driver, but somewhat slower).

**Boot the installation disk to run the configuration program MICRO.INSTALLER.
Do not use a GS/OS program launcher.**

After you have launched the program, the screen gets blanked. If your hard disk is brand new, you will notice a short time of hard disk activity while the screen says **one moment please...**

At this time, the installation program scans your hard disk to find the operating parameters (number of cylinders, number of heads and number of sectors per track).

After this primary and automatic setup process, you will find the parameters of your hard disk displayed on the top of the screen, right below the screen title. The only work that is left for you is to setup the number of partitions and their sizes.

- 1 Press the **E** key to enter the partition editor.
- 2 Now you can press **A** to add a partition or **D** to delete the current partition highlighted.

You cannot add a new partition as long as the last partition created is still zero blocks large. If the number of blocks is greater than zero, the partition is considered as valid, and a new one can be added. Use the **←** **→** keys with or without the **⌘** and **⌘** keys to adjust the sizes of the partitions.

The **↑** **↓** keys let you choose the partition to be modified. While you are setting up the partition sizes, you will find the total free number of blocks for your hard disk being growing or shrinking. You can add as many blocks as you like until the total free number of blocks is zero. You can hear a small beep if something is out of range. When you have finished creating your partition set, press **return** or **esc** to leave the partition editor. The light bar goes back to the menu list.

Now it's time to save the information you just created.

Use Menu Item **Write Configuration** to write your partition map and operating parameters to hard disk. The program should report success.

Leave the Installer program by pressing **esc** or using the Menu Item **QUIT** and confirm quitting. This is the only way you should shut down this program.

Reboot your Apple II (this is required before the IDE drive(s) can be recognized by the MicroDrive Turbo Card).


At this time, trying to boot from the MicroDrive Turbo Card ends in the message **Volume not formatted** or **Unable to load ProDOS**. This is OK. So, you will still have to boot from another System volume such as a System Disk or another hard disk.

Use any formatting utility to format your partitions.

You can use GS/OS and the FINDER, the Advanced Disk Utilities or PROSEL-16 for formatting your volumes. The default boot volume is volume (partition) number one.

Holding down the **⌘** key or the **Option** key while booting lets you choose an alternate boot volume by pressing the corresponding key for the volume number.

After a complete GS/OS system has been installed on the first partition, the MicroDrive Turbo Card is ready for booting. To install GS/OS correctly you must use the GS/OS Installer, the Finder or another 16-bit program (such as ProSel-16) which is able to copy resource forked files.

If you want to use two drives with your MicroDrive Turbo Card, you must repeat those steps listed before for your second drive. Just boot the MicroDrive Installer Program and press  after highlighting menu item **DRIVE CHANGE**. After this, continue setting up the partition map and repeat the other steps.

Do not forget to copy the GS/OS driver from the installation disk to the */System/Drivers folder on any of your boot volumes (* stands for the name you choose when formatting the volume). Only with the GS/OS driver installed you will get optimum performance out of your MicroDrive Turbo Card.

Changing Hard Drive Configuration

If you want to change anything, first boot the MicroDrive Turbo Card Installation Disk and run the **MICRO.INSTALLER**.

The installer automatically reads the configuration block from your hard disk. Now you can make changes on your partitions or on the boot volume for example.

It is recommended that making hard disk backups for reason of data security. In the case something went wrong, it is also useful to have written down the complete setup parameters of your configuration.

You may change any item without the risk of losing data, except the parameters listed here:

- The number of cylinders, heads and sectors.
- The number of blocks assigned to each volume.
- The number of volumes for your hard disk.

When you have finished modifying your configuration, save the configuration block by writing it back to your hard disk (Menu Item **Write Configuration**).

Every time you want to do that, you will get a warning message to remind you that you may lose your data on the hard disk. The message appears whether or not you made changes to the cylinders, heads and sectors and the volume parameters. As mentioned before, there is no danger to your hard drive's data as long as you have not changed these parameters.

Modifying Partitions

If you want to change a partition in size, the data on this partition will be lost. In addition, the contents of any partition with a number greater than the one you may want to change will be lost. So be very careful when doing changes and make a backup first.

If you reduce the number of partitions, the data on any partition greater than the new number will be lost.

After changing any partition size, it is absolutely necessary to (high-level) format the modified partition and all the partitions with the higher numbers! (Use the Finder, the Advanced Disk Utilities or another disk utility).

Do not forget this step, it is required even if you can still read the old contents of this partition! Only after re-formatting the volume directory reflects the actual size of the new partition.

Another Look at the MicroDrive Installer

The **MICRO.INSTALLER** is a PRODOS 8 system file which is fully compatible and can be launched under ProDOS 8 or GS/OS without the need of any further accessories.

The **MICRO.INSTALLER** can be launched from any environment without the need of **BASIC.SYSTEM**. It even can be launched directly by booting the MicroDrive Turbo Installation Disk.

The **MICRO.INSTALLER** also can be run from any program launcher that supports launching SYS files (for example the built-in PRODOS 8 launcher or the GS/OS Finder).

After the program's startup, it tries to read the configuration data from the first hard drive and displays it on the 80-column screen. Now you can change any parameters as you like. The program should be self-explanatory. After you have changed any parameters, please don't forget to save your new configuration using **WRITE CONFIGURATION TO HARD DISK**. However, you have the option leaving the program without saving anything.


New Hard Disk Setup

When there is no valid configuration data found at start-up, the program assumes that a new hard disk was connected and needs to be configured. In this case, the program automatically does all the necessary things to set up a valid configuration including default operating parameters (it is basically the same thing as pressing `control R`, re-read configuration parameters from hard disk). The only thing you have to do is to set up one or more partitions by entering the partition editor and to save your configuration data on the hard disk. As the

last step, use a formatting utility like the FINDER, the Advanced Disk Utilities or PROSEL-16 to format your partitions.

The MICRO.INSTALLER does not check your configuration to see if a second drive (Slave) Drive is present. If you need a second drive to be configured, choose menu item CHANGE drive and the program will behave just like it has when dealt with the first drive.

Once you have run the **MICRO.INSTALLER** to create a new hard disk configuration, there is no need to launch it again from the installation disk.

The program writes itself on your hard disk into a safe area which cannot be accessed from any PRODOS or GS/OS program. At any time when you boot from your hard disk, you can choose launching the utility program first. When you reboot your computer, just hold down the  key or the **Option** key and press **I** to run the **MICRO.INSTALLER**.

If you prefer to run the **MICRO.INSTALLER** from a program launcher, you can keep a copy on your hard disk.

Several additional options for setting up operating parameters can be found in this program. The functions are not implemented yet and won't be of any use for correct hard disk operation. These options will be added in a later revision of the card's software.

Installing the GS/OS Driver

It is recommended that you install the MicroDrive's GS/OS driver on your System volume (the floppy disk or the hard disk partition you boot from). If you don't install the driver, your MicroDrive Turbo Card won't give you the fastest speed you could expect, however, the card also works fine with no GS/OS driver installed.

To install the GS/OS driver, just use any file copy utility and copy the driver from the utilities disk to your `/my.disk/SYSTEM/DRIVERS/` folder. **my.disk** is the place holder for the name of your boot volume. This can be an Apple system disk, your hard disk, or a RAM disk.

If you are planning to use more than one volume as a bootable system volume, please be sure to copy the driver into every **SYSTEM/DRIVERS/** folder.

The driver's functions are available after the next reboot of a GS/OS system volume.

You also can use the **INSTALLER** to install the driver a bit more conveniently. For this purpose, a copy of the **INSTALLER** (present on the GS/OS system disk **/INSTALL**). should be launched from the MicroDrive Turbo Utilities Disk.

Keep in mind that under the Apple IIGS Operating System a GS/OS driver is not available under ProDOS 8 operation. The driver is only active while GS/OS is active. If you launch a ProDOS 8 application, the driver is suspended until you return to GS/OS operation. This is true for any block device driver under GS/OS.

Using Two Hard Disk Drives

The MicroDrive Turbo Card supports the connection of two IDE drives. Drive one is called the MASTER drive, and drive two is also called the SLAVE drive. The Master/Slave condition is determined by the hard disk's jumper setting. There is no difference in connecting the hard disk to the IDE interface - same cable, same plug.






Hard Drives Jumper Settings

Always have proper documentation for the drives you are using, otherwise you will be lost if you don't know how to jumper the drives.

One-Drive Setup: Your drive should be jumped as **MASTER**, and **NO SLAVE PRESENT**.

Two-Drive Setup: The first drive should be configured as **MASTER** (with jumper **SLAVE PRESENT** set). The second drive should be jumped as **SLAVE**. In some cases, you need to set additional jumpers as **HOST SLAVE PRESENT** or drive **SLAVE PRESENT**. Be sure to power up both drives at the same time.




Booting from a Different Volume




Using the MicroDrive Turbo Card, you can choose any volume for the boot volume. Just hold down the  key or the **Option** key at boot time. At the bottom of the screen, you can see a message which tells you how many volumes you have. Now press any number  through  and  through  for the corresponding volumes 1... 16.

Be aware that you must have a bootable operating system on the desired boot volume. At any time, when no key is pressed, rebooting will use the default boot volume as specified in the utility program. Although you can boot from a partition on drive two, the operating parameters from drive one will be used.

The default Boot Volume can be stored on both drives with different values. The boot volume parameter only takes effect when coming from drive number one. This is for reason of compatibility in the case you want to exchange the drives (yes, you can do that with no problems) or you once prefer to use only one drive (this could also be your second drive).

One of the handiest features of the MicroDrive Turbo Card is the ability to select the volume from which you would like to Temporally Boot.

Hold down the  key when turning on the computer or rebooting and press the number key of the desired partition from which to boot. When holding down the  key the boot process will pause until either a number key is pressed or the  key is released.

Releasing the  key and not pressing a number key will cause the default volume to automatically boot. You are able to boot from ANY of the first sixteen (16) partitions on the CF Card you desire. To boot from partitions ten (10) to sixteen (16) use the letter keys  to . The default boot volume can also be changed in the MicroDrive Turbo Partition Management Utility.

There can be issues when formatting partitions using some programs, such as Copy II Plus. If you try to format a partition and the size is different than expected we recommend using the format utility which is located on the MicroDrive Turbo Utility Disk called **II.E.PART.FORMAT**.

This will let you format partitions correctly. Also, there has been a rare issue reported on the II when ProDOS 8 maps the 3rd and 4th partitions to Slot 2, Drive 1 and Drive 2 rendering the partitions to report **Not a ProDOS Volume** or other such errors.

To resolve this issue either install a device, such as a RAM card, that will force ProDOS 8 to reassign 3rd and 4th partitions to something other than Slot 2 or change the Slot in which the MicroDrive Turbo is installed.

AE Vulcan Upgrade

Hard Disk Back Up



This section of the Manual is for users who wish to upgrade an AE Vulcan Hard Drive System to the MicroDrive Turbo. The end result will be a faster interface between the AE Hard Disk Drive and the Apple II Computer.

Before replacing the AE Vulcan IDE Controller, first make a complete backup of all data on the Hard Disk Drive. The partitioning scheme of the MicroDrive Turbo Card is not compatible with the partitioning scheme of the Vulcan IDE Controller; the Vulcan Hard Disk Drive will be treated as if it were a New Hard Disk Drive.

The easiest way to make backups is to use the Archive that comes with GS/OS System 6. When using the Archive, be sure to make file by file backups. Only this kind of backup guarantees that you can restore the data on a different hard disk drive with different volume sizes.

Setting Up the Hard Drive

After you have made the necessary backups and the MicroDrive Turbo Card is connected to your Vulcan, you can run the program **MICRO.INSTALLER** on the MicroDrive Turbo Card Utilities Disk. Refer to [Preparing your hard drive](#) in this manual.

Be aware that it is possible with some old hard drives that they cannot be setup automatically. If you are getting error messages after the **MICRO.INSTALLER** has tried to find the hard drive's operating parameters, you must set these parameters yourself by using menu item **MANUAL SETUP**.

During a manual setup, you will be required to enter the native hard disk drive's parameters. If you are not sure about what kind of hard disk your Vulcan or InnerDrive has built in, you will need to contact [ReActiveMicro](#), please let us know the hard disk drive model you are using (manufacturer, model number and capacity) and we will try to find the correct operating parameters. In many cases you can use menu item GET HARD DISK INFO to find the correct parameters.

Error Messages at Boot Time

To boot from the MicroDrive Turbo Card, the firmware must be able to access the first hard disk **Master** connected to the card. Even if you want to boot from a volume on the second hard disk **Drive 2**, the first hard disk must be powered up, must be configured as a master drive and must have a valid setup. The current operating parameters will always be the ones from the master **Drive 1**, regardless of the volume number you may want to boot from.

If an error occurs during the very first part of the boot process, the MicroDrive Turbo Card informs you about the error by displaying one of the following error messages and gives you control over your computer at the Applesoft Basic prompt.

Drive 1 Error

The MicroDrive Turbo cannot get access to the first hard disk.

There are many reasons that may cause this error:

- A.** There is no hard disk connected
- B.** The hard disk is not powered up
- C.** The hard disk is jumped as a slave drive
- D.** Two hard disk drives are connected and both are set to a master drive
- E.** The hard disk has a defect
- F.** The first hard disk is not ready within 15 seconds after power up.

Missing configuration data

The MicroDrive Turbo Card cannot load a valid configuration from the first hard disk (Master). A setup using the installation program **MICRO.INSTALLER** is required to create a valid configuration. Also, the sector on the hard disk containing the configuration data could be physically damaged.

Error reading boot sector

A read error occurred when trying to load the MicroDrive Turbo Card's private boot sector (not the ProDOS boot sector). This is because the boot sector is damaged (bad checksum) or has no valid code for the continuation of the boot process.

This sector is always automatically written to the hard disk when writing a configuration file to the disk from where you started the configuration program (this feature can be used for a **Refresh** if the boot sector has been destroyed occasionally).

Volume not formatted

This error message is related to the volume you want to boot from.

The MicroDrive Turbo Card could load a configuration, but it could not find anything that looks like a PRODOS boot sector. This sector is usually present after a volume has been high-level formatted by a system utility like the **Finder** etc.

Unable to load ProDOS

This message appears if the ProDOS boot routine (located on the boot sector of any PRODOS volume and loaded into the computer's memory at boot time) has found one of the following errors:

- A.** The boot routine cannot find a directory structure on the boot volume (directory may be damaged).
- B.** The boot routine cannot find a file with the name PRODOS in the root directory of the current boot volume. The file PRODOS usually is the PRODOS 8 operating system or the file that launches GS/OS.
- C.** While loading PRODOS, a read error occurs because of a bad sector belonging to the file PRODOS.



MicroDrive

T U R B O

Problematic Hard Disk Drives

CONNOR

CP30204: Universal translation mode does not work correctly, replaced by CP30254.

CP30104, 105 Mbytes Version: Universal translation mode does not work correctly. The 120Mbyte version of this drive (CP30104) works fine.

Seagate

Model: ST1144A: Unable to read or write 256 sectors at a time, this is required for the MicroDrive Turbo Card.

Western Digital

It is recommended that you use only WD drives manufactured in 1994 or later.

WD Caviar Series

If you want to use a WD Caviar Series Hard Disk Drives with the MicroDrive Turbo Card, you will have problems with the original MicroDrive Turbo software (this is the firmware marked Apple IIGS Rev. 1.2x and its GS/OS driver v2.xx).

The WD Digital Hard Drives cannot be handled on the Apple IIGS like other IDE drives, they require special handling due to some very special properties of these drives.

To use a WD Caviar Hard Drive, you need to re-burn your existing firmware EPROM on the MicroDrive Turbo Card. The image of the firmware v1.5x for the EPROM is included in this folder. If you cannot do it yourself, ask a friend or somebody at your local computer group whether they can erase and burn a 27C512 EPROM for you. Otherwise, send a request to us for getting a new EPROM.

You must also use the special GS/OS driver (file name is **MicroDrive.v1.5**) provided in this folder.

If you try to use a different driver, nothing serious will happen, however, you won't get the benefits (i.e., speed) from the driver's functions because it will refuse to work with this version of the firmware.

HD Installation

These instructions must be followed exactly as shown:

- 1** Before trying to launch the installer program, first do a dummy **Boot-from-Hard Disk**. We all know that this seems to be not very useful and the boot process will fail, but this step is required nevertheless. The hard disk must be connected and powered up.
- 2** Launch the installer program from disk. Use the latest installer you can find on the MicroDrive Turbo installation disk (a suitable version is included with this folder). The installer will start to scan your drive for hard drive parameters and display the information it has found.
- 3** Now, be aware that this information is not correct, i.e., we cannot use this set of parameters! Also, keep in mind that the Installer only scans the hard drive's parameters if it cannot find a setup saved to the reserved system area.
- 4** Use the menu item **Manual Hard Disk parameters** to setup your hard disk parameters. You cannot use the results from the automatic setup (this is only true for the Western Digital Hard Drives). This means you must know the native hard disk parameters of your hard disk. Usually these parameters (the native parameters) are printed on the hard drive's label.
- 5** You cannot use parameters different from the native hard disk parameters because the Western Digital drives always automatically return to the native parameters setup after a system reset, while the Apple IIGS still can be active after such a reset, and the MicroDrive Turbo firmware/software has no means to detect such a situation. This would result in a malfunction when trying to read or write data.
- 6** To be sure the manual setup process was correct; you can run a **Verify hard disk**. Once after you have started the verify process, the hard disk knows which parameters it should use and you can re-verify your setup by running the **Re-scan hard disk** menu item.
- 7** Setup your hard drive partitions as you like using the partition editor.
- 8** Save your hard disk configuration (**Write configuration to hard disk**). Continue the installation process as it is described in the manual.

IDE Interface Overview

Introduction

IDE (Integrated Drive Electronics) is a broad term that refers to any interface where the controller is built into the drive. Specifically, ATA (AT Attachment) and Serial ATA are types of IDE interfaces. Although "IDE" and "ATA" are often used interchangeably, "IDE" is a more general term.

ATA drives offer a cost advantage over older separate controller-based interfaces like SCSI because they eliminate the need for an external controller or host adapter and simplify cable connections. The ATA interface was originally designed for the IBM AT computer's ISA bus, which was the first 16-bit bus capable PC. The term IDE was coined by manufacturers to market the drive/controller combination used in drives with the ATA interface. Due to its integration into most PC motherboards, ATA became the dominant hard disk drive setup.

The IDE Interface

IDE (officially referred to as ATA) is a generic term that applies to any drive with a built-in disk controller. It is an ANSI standard, or more accurately an evolving standard with various published standard versions. The term IDE can roughly apply to any disk drive with a built-in controller, whereas ATA denotes a specific interface. Referring to the original parallel version of the interface, what we call ATA originally referred to a hard disk drive that plugged directly into a version of the AT-bus, more commonly known as the 16-bit ISA bus.

ATA is a 16-bit parallel interface, meaning that 16 bits are transmitted simultaneously down the interface cable. Integrating the controller and drive frees the controller and drive engineers from having to adhere to the strict guidelines imposed by the earlier interface standards. Engineers can design what essentially are custom drive and controller implementations because no other controller will ever have to be connected to the drive. The resulting drive and controller combinations can offer higher performance than earlier standalone controller and drive setups. IDE drives sometimes are called drives with embedded controllers.

Many people who use systems with ATA connectors on the motherboard believe that a hard disk controller is built into their motherboards, but in a technical sense the controller is actually in the drive. Although the integrated ATA ports on a motherboard often are referred to as controllers, they are more accurately called host adapters (although you'll rarely hear this term). A host adapter can be thought of as a device that connects a controller to a bus.

IDE Origins

The earliest IDE drives were called Hardcards and were nothing more than hard disks and controllers bolted directly together and plugged into a slot as a single unit. Companies such as the Plus Development Division of Quantum took small 3 1/2-inch drives (either ST-506/412 or ESDI) and attached them directly to a standard controller. The assembly then was plugged into an PC ISA bus slot as though it were a normal disk controller, this concept was quite popular with Tandy MS-DOS Compatible Computers.

Unfortunately, the mounting of a heavy, vibrating hard disk in an expansion slot with nothing but a single screw to hold it in place left a lot to be desired—not to mention the possible interference with adjacent cards because many of these units were much thicker than a controller card alone.

Several companies got the idea to redesign the controller to replace the logic-board assembly on a standard hard disk and then mount it in a standard drive bay just like any other drive. Because the built-in controller in these drives still needed to plug directly into the expansion bus just like any other controller, a cable was run between the drive and one of the slots.

These connection problems were solved in various ways. Compaq was the first to incorporate a special bus adapter in its system to adapt the 98-pin AT (ISA) bus edge connector on the motherboard to a smaller 40-pin header style connector the drive would plug into. The 40-pin connectors were all that was necessary because it was known that a disk controller never would need more than 40 of the ISA bus lines.

Control Data Corporation (CDC), Western Digital, and Compaq actually created what could be called the first ATA-IDE interface drive and were the first to establish the 40-pin ATA connector pinout. The first ATA IDE drives were 5 1/4-inch half-height CDC 40MB units with integrated WD controllers sold in the first Compaq 386 systems in 1986, all of which made Compaq a forefront competitor to IBM in the early years of the PC marketplace.

Eventually, the 40-pin ATA connector and drive interface design was placed before one of the ANSI standards committees that, in conjunction with drive manufacturers, ironed out some deficiencies, tied up some loose ends, and then published what was known as the CAM ATA (Common Access Method AT Attachment) interface.

The CAM Committee was formed in October 1988, and the first working document of the AT Attachment interface was introduced in March 1989.

Before the CAM ATA standard, many companies that followed CDC, such as Conner Peripherals, made proprietary changes to what had been done by CDC. As a result, many older ATA drives from the late 1980s are very difficult to integrate into a dual-drive setup that has newer drives.

By the early 1990s, most drive manufacturers brought their drives into full compliance with the official standard, which eliminated many of these compatibility problems.

Some areas of the ATA standard have been left open for vendor-specific commands and functions. These vendor-specific commands and functions are the main reason it is so difficult to low-level format ATA drives. To work to full capability, the formatter you are using usually must know the specific vendor-unique commands for rewriting sector headers and remapping defects.

The Evolution of IDE (ATA):

- ATA-1 (1986–1994)
- ATA-2 (1996) EIDE
- ATA-3 (1997)
- ATA-4 (1998) Ultra-ATA/33
- ATA-5 (1999) Ultra-ATA/66
- ATA-6 (2000) Ultra-ATA/100

Each version of ATA was backward compatible with the previous versions.

Compact Flash Overview


What is a CF Storage Card?

A CompactFlash (CF) Storage Card is a type of solid-state storage device that functions similarly to an IDE hard disk drive. The main differences are that it has no moving parts, making it shockproof and more reliable, and it consumes less power due to its solid-state nature.

The CompactFlash Storage Card contains a single chip controller and flash memory module(s) in a matchbook-sized package with a 50-pin connector consisting of two rows of 25 female contacts each on 50 ml (1.27 mm) centers. The controller interfaces with a host system allowing data to be written to and read from the flash memory module(s).

The CompactFlash Storage Cards on-card intelligent controller manages interface protocols, data storage and retrieval as well as Error Correcting Code (ECC), defect handling and diagnostics, power management and clock control. Once the CompactFlash Storage Card has been configured by the MicroDrive Turbo, it appears as a standard ATA (IDE) disk drive.

CF Card Working Diagram

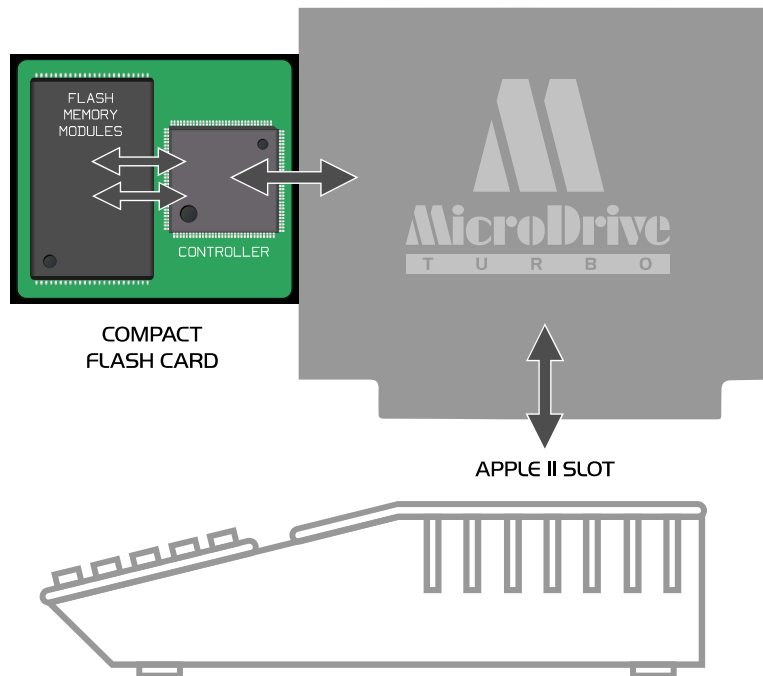

For more information on this type of storage device: compactflash.org

Card History

The MicroDrive Turbo was originally designed by Joachim Lange of ///SHH Systeme - Germany and released in 1996.

First DMA IDE Controller

After its release the MicroDrive Turbo Card was the first Apple II IDE Controller that offered DMA capability, true performance was finally realized for Apple II Computer Systems.

Card Revisions

In 2004 Gerber Street Enterprises started reselling select items from ///SHH Systeme.

Mid-2006 ReActiveMicro took over reselling all ///SHH Systeme items.

Joe's Computer Museum Review

On August 13, 2016 Joe Strosnider from the YouTube channel Joe's Computer Museum posted a review of several Mass Storage options for the Apple II, and the MicroDrive Turbo was among them.

Joe gives some very good feedback regarding the differences between them and how the MicroDrive Turbo Card performs under real world conditions.

<https://www.youtube.com/channel/UCyfwZvTPPJV4peBHupd6Ckw>



khaibitgfx@gmail.com



www.reactivemicro.com